

create walls with style...it's easy™

easyascot®

create walls with style...it's easy™

easyascot®



Before

Ideal for use in domestic applications; garages, kids bedrooms, rumpus rooms, etc.
Ideal for use in commercial applications; shops, reception areas, waiting rooms, etc.



After

This installation was completed using **easyascot®** below and **easyline®** above the dado rail. For more information on **easyline®** please refer to the **easycraft® easyline®** brochure



easy application for all rooms and halls

Other products offered in the **easycraft®** range



- easyvj®**
- easyregency®**
- easybead®**
- easyline®**
- easydado®**
- easycurve®**
- easyclear®**
- easyclad®**

For more information contact **easycraft®**

WEBSITE www.easycraft.com.au
EMAIL welcome@easycraft.com.au
PHONE 1800 852 086
FAX 07.3906 7299

Your **easycraft®** stockist:



Colonial
or
Tropical
or
Modern
or
Classic

Transform a room from ordinary to extraordinary

It's easy with **easyascot®**


create walls with style...it's easy™

easyascot®

FEATURES AND BENEFITS

- **Tough**
Made from Australian plantation grown timber MDF. Over 10 times stronger than plasterboard!
- **Moisture resistant**
Craftwood MR® medium density fibre board is moisture resistant and ideal for kitchens and bathrooms. (Do not directly expose to water).
- **Fully primed**
Ready to Paint. Premium grade primer means little or no preparation is required – saving you time and money!
- **Unique easyjoin® System**
Our patented system makes it so easy to use. On new walls, you can even join panels off-stud.
- **Can be used for new or existing walls**
Ideal for domestic, hospitality, medical or commercial applications.
- **Australian made and owned**
We are an Australian company with our factory & Head Office in Brisbane. Our products consist of Australian made raw material and components. Your money stays here in Australia!
- **It looks great**
You can radically change how a room looks quickly, easily and economically!

MEASURING UP

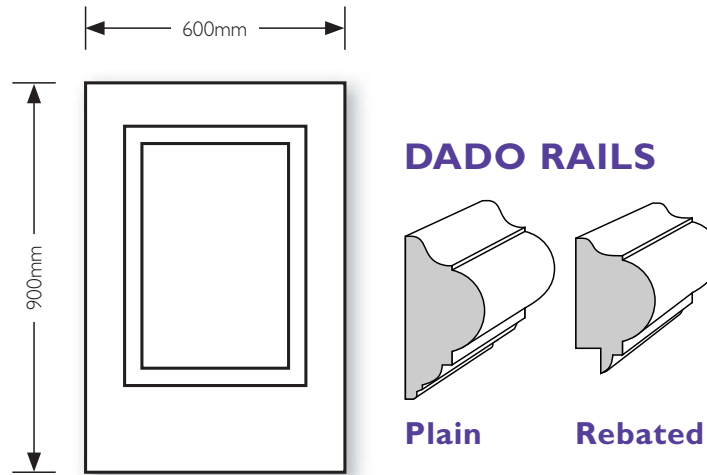

1. Measure the length of each wall you are covering, divide by 600mm (the width of each panel).
2. Always round up the number of panels required. Eg 8.4 panels becomes 9 panels.

Wall Length in mm	Panels Required
Up to 600mm	1 (may be reversed & cut to fit)
601mm to 1200mm	2
1201mm to 1800mm	3
1801mm to 2400mm	4
2401mm to 3000mm	5
3001mm to 3600mm	6
3601mm to 4200mm	7
4201mm to 4800mm	8
4801mm to 5400mm	9

create walls with style...it's easy™

easyascot®

WHAT DO YOU NEED?

- Tape measure
- Pencil (not a pen)
- Spirit Level
- String line
- Construction adhesive
- Saw (Circular is ideal)
- Hammer
- Nails
- Dust mask
- Safety goggles

- x easyascot® panels
- x easydado® rails (3.6m each)

LET'S DO IT!

1. Remove existing skirting boards.
2. Start in the middle of each wall and draw a plumb (vertical) line
 - A. For an even number of panels, place the first panel adjacent to the line.
 - B. For an odd number of panels, place the first panel squarely over the line.
3. Allow a 10mm gap from the floor. (use a spacer to make this easy)
4. Apply construction adhesive to the wall, plumb with a spirit level and nail panel into the studs.
5. Butt up the next panel and repeat.
6. Continue until a full panel won't fit. At this point, reverse a panel, cut to size and place in gap.
7. Place easydado® rail along the top edge.
8. Replace skirting boards & paint to suit.
9. Sit back and accept the praise.

NB. Please see our website for full installation instructions.

www.easycraft.com.au